AUXILLARY SWITCH INSTALLATION

Knight®
by Midmark
Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

INTERNATIONAL UNIT MODEL "SW"

REMOVE THE DRESS NUT & LOCKING RING FROM SWITCH ASSEMBLY.
REMOVE COVER FROM UNIT.
SLIDE THREADED BUSHING OF SWITCH THROUGH HOLE IN LEFT SIDE OF UNIT.
TURN SWITCH SO THAT THE PURPLE WIRE IS TOWARD THE BACK OF UNIT.
REPLACE DRESS NUT.
CONNECT THE BROWN AND PURPLE SWITCH WIRES TO THE MATING BROWN AND PURPLE WIRES FROM THE UNIT
CONNECT THE BROWN AND PURPLE LEADS IN THE JUNCTION BOX TO THE ACCESSORY TO BE OPERATED BY THE SWITCH.
CAUTION: THE ACCESSORY SWITCH AND WIRES ARE FOR CLASS 2 LOW ENERGY CIRCUITS ONLY.

ESCORT UNIT MODEL "S"

REMOVE THE DRESS NUT & LOCKING RING FROM SWITCH ASSEMBLY.
SLIDE THREADED BUSHING OF SWITCH THROUGH HOLE OF BRACKET PROVIDED AS SHOWN. TURN SWITCH SO THAT THE PURPLE WIRE IS TOWARD BACK OF UNIT.
REPLACE DRESS NUT.
REMOVE COVER FROM UNIT.
USING LOCKING WASHER, SCREW & NUT PROVIDED, FASTEN BRACKET TO THE UNDERSIDE OF LEFT SIDE OF UNIT IN THE SIDE PLATE HOLE.
REPLACE DRESS NUT.
CONNECT THE BROWN AND PURPLE SWITCH WIRES TO THE MATING BROWN AND PURPLE WIRES FROM THE UNIT.
CONNECT THE BROWN AND PURPLE LEADS IN THE JUNCTION BOX TO THE ACCESSORY TO BE OPERATED BY THE SWITCH.
CAUTION: THE ACCESSORY SWITCH AND WIRES ARE FOR CLASS 2 LOW ENERGY CIRCUITS ONLY.

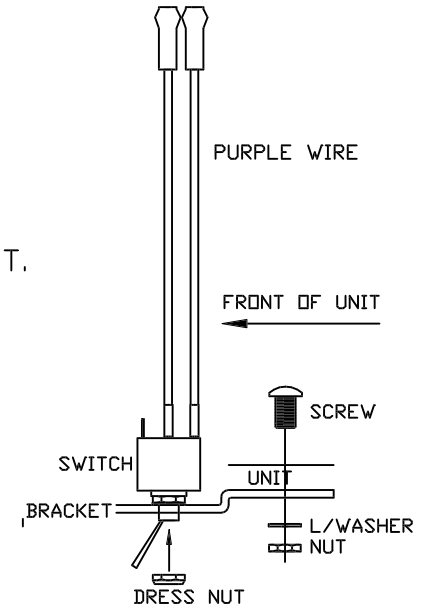

TP1144 Rev. B (10/99)